

DECODING

Kako uci u originalni kodni broj.....

Click on the manufacturers list below to find the instructions for your model

ALPINE	AUDI	BECKER	BLAUPUNKT	BMW	CHRYSLER	CITROEN	CLARION
DAEWOO	FIAT	FORD	FUJITSU	GRUNDIG	HITACHI	HONDA	JVC
KENWOOD	NISSAN	OPEL	PANASONIC	PEUGEOT	PHILIPS	PIONEER	PORSCHE
RENAULT	ROVER	SAAB	SEAT	SONY	VAUXHALL	VOLKSWAGEN	VOLVO

Alpine

[P05269484AB](#)

[Return to Menu](#)

P05269484AB

Code entry is only possible when the main display shows "CODE"

If the display does not appear to change when the code is entered, then the unit is Codelocked, and will require Decoding to reset.

The Code is entered by pressing the corresponding presets in order.

But take care as you may only have one attempt !

eg:- if your code number is 4332

Press Preset "4" once only

Press Preset "3" once only

Press Preset "3" once only

Press Preset "2" once only

The Radio will now display "ON" and should now function.



[CONCERT 7646248380](#)

Becker

Please phone for details

Blaupunkt

[AUDI CONCERT 7646248380](#)

[BETA](#)

[BOSTON CC20](#)

[BOSTON CC22](#)

[CAR300\(D\)](#)

[CITROEN PF1\(A\)](#)

[CITROEN PH1\(D\)](#)

[RENAULT H0 RDS](#)

[TRAVELPILOT RNS149](#)

[VERONA CR43](#)

[BOSTON CC20](#) [BOSTON CC22](#) [CITROEN PF1\(A\)](#) [VERONA CR43](#)

Code entry is only possible when the main display shows " COD ".

If the display shows "- - -" then the unit is Codelocked, and will require Decoding to reset.

Press Preset "1" and the display will show " 0 0 0 "

Press Preset "1" to give the first digit, this can only be a " 1 " or a zero, shown as a blank

Press Preset "2" repeatedly until the second digit is correct

Press Preset "3" repeatedly until the third digit is correct

Press Preset "4" repeatedly until the fourth digit is correct

Press the tuning " ^ " button to enter the code.

CITROEN PH1(D) RENAULT H0 RDS

Code entry is only possible when the main display shows " CODE ".
If the display shows "- - -" then the unit is Codelocked, and will require Decoding to reset.

Press Preset "1" and the display will show " 0 0 0 0"
Press Preset "1" repeatedly until the first digit is correct
Press Preset "2" repeatedly until the second digit is correct
Press Preset "3" repeatedly until the third digit is correct
Press Preset "4" repeatedly until the fourth digit is correct
Press Preset "6" to enter the code.

[Return to Menu](#)

CAR300(D)

Switch On the Vehicle Ignition and press and hold the "AS" button as you turn the unit on.
The Radio will beep followed by "10 - - -" on the display.
If the display shows "SAFE" then the unit is Codelocked, and will require Decoding to reset.

Press Preset "1" repeatedly until the first digit is correct
Press Preset "2" repeatedly until the second digit is correct
Press Preset "3" repeatedly until the third digit is correct
Press Preset "4" repeatedly until the fourth digit is correct
Press and hold the "AS" button to enter the code.

[Return to Menu](#)

BETA

Switch On the Vehicle Ignition and turn the unit on.
The Radio will display "SAFE" followed by "1000" after 5 seconds
If the display continues to show "SAFE" and a number in the bottom left of the display,
then the unit is Codelocked, and will require Decoding to reset.

Press Preset "1" repeatedly until the first digit is correct
Press Preset "2" repeatedly until the second digit is correct
Press Preset "3" repeatedly until the third digit is correct
Press Preset "4" repeatedly until the fourth digit is correct
Press and hold the ">>" button to enter the code.

[Return to Menu](#)

TRAVELPILOT RNS149

Turn the unit on, the CODE screen will be displayed after the Startup screen has finished.

Press "<<" or ">>" to select the first digit, and press "OK" to enter

Press "<<" or ">>" to select the second digit, and press "OK" to enter

Press "<<" or ">>" to select the third digit, and press "OK" to enter

Press "<<" or ">>" to select the fourth digit, and press "OK" to enter

The code should now be displayed on the screen.

Press ">>" until the cursor reaches the return symbol at the far right of the screen, and press the "OK" button to enter, where the radio will now power up.

[Return to Menu](#)

AUDI CONCERT 7646248380

Press and hold "TP" and "RDS" and turn unit on. Display will show "SAFE" followed by "1000".

Press preset "1" repeatedly to select the first digit

Press preset "2" repeatedly to select the second digit

Press preset "3" repeatedly to select the third digit

Press preset "4" repeatedly to select the fourth digit

The code should now be displayed on the screen.

Press and hold "TP" and "RDS" to enter the code, and the radio will now power up.

[Return to Menu](#)

BMW

[BAVARIA C BUSINESS RDS](#)

[KE-92ZBM](#)

[Return to Menu](#)

Chrysler

Citroen

[CITROEN PF1\(A\)](#)

[CITROEN PH1\(D\)](#)

[PU-9667A](#)

Clarion

[PU-9534A](#)

[PU-9536A](#)

[PU-9667A](#)

[PU-9679A](#)

[PU-9715A](#)

[SAAB 42 32 765](#)

[PU-9534A](#) [PU-9667A](#)

Code entry is only possible when the main display is blank. If the display shows a series of digits, then the unit is Codelocked, and will require Decoding to reset.

The Code is entered by pressing the corresponding presets in order.

But take care as you may only have one attempt !

eg:- if your code number is 4332

Press Preset "4" once only

Press Preset "3" once only

Press Preset "3" once only

Press Preset "2" once only

The Radio should turn on automatically.

If the Number you have entered is permanently displayed, it is incorrect and now Codelocked.

[PU-9679A](#)

Code entry is only possible when the main display shows a flashing "CODE IN"

If the display shows "SECURITY", then the unit is Codelocked, and will require Decoding to reset.

The Code is entered by pressing the corresponding presets in order.
But take care as you may only have one attempt !

eg:- if your code number is 4332
Press Preset "4" once only
Press Preset "3" once only
Press Preset "3" once only
Press Preset "2" once only
The Radio should turn on automatically.

[Return to Menu](#)

PU-9715A SAAB 42 32 765

Code entry is only possible when the main display shows "CODE IN"
If the display shows "- - -", then the unit is Codelocked, and will require Decoding to reset.
The Code is entered by pressing the corresponding presets in order.
But take care as you may only have one attempt !

eg:- if your code number is 4332
Press Preset "4" once only
Press Preset "3" once only
Press Preset "3" once only
Press Preset "2" once only
The Radio should turn on automatically.

[Return to Menu](#)

PU-9536A

Code entry is only possible when the main display is blank. If the display shows a series of digits, then the unit is Codelocked, and will require Decoding to reset.

The Code is entered by pressing the corresponding presets in order.
But take care as you may only have one attempt !

eg:- if your code number is 4332
Press Preset "4" once only
Press Preset "3" once only
Press Preset "3" once only
Press Preset "2" once only
The Radio should turn on automatically.

If the Number you have entered is permanently displayed, it is incorrect and now Codelocked.
A Common fault of this unit is for the On / Off Switch to jam - phone for details.

Daewoo

[AKF-9637WG-RE \(TANK\)](#)

[AKF-9637WG-RE \(TANK\)](#)

Code entry is only possible when "CODE" is flashing, and the display shows "- - -" when turned on. If the display shows "ERR", then the unit is Codelocked, and will require Decoding to reset.

The Code is entered by pressing the corresponding presets in order. But take care as you may only have up to three attempts !

eg:- if your code number is 4332

Press Preset "4" once only

Press Preset "3" once only

Press Preset "3" once only

Press Preset "2" once only

The code will display on the fascia for a second or two, and should then turn on automatically.

If "- - -" is now shown, then the code entered was incorrect.

FIAT

[AD182H](#)



2001	2005 89FB-18K876-AB	2006 RDS 91FB-18K876-AA	2006 RDS 92FB-18K876-AA
2006 RDS 93FB-18K876-GB	2008 93AB-18K876-BB	2040 93AB-19B160-AC	ESRT32PS
3000 2 CH 96FP-18K876-EB	3000 2 CH 96FP-18K876-EC	3000 TRAF 96FP-18K876-FC	3000 TRAF XS6F-18K876-BA
4000 TRAF 97FP-18K876-GA	5000 RDS 96AP-18K876-AC	5000 RDS 96AP-18K876-CA	5000 RDS 96AP-18K876-CC
5000 RDS 97AP-18K876-LA	5000 RDS 98AP-18K876-BA	6000 CD 97AP-18C815-HA	6000 CD 98AP-18C815-CA
7000 RDS 95GB-18K876-BA	7000 RDS 95GB-18K876-BC	7000 RDS 97AP-18K876-EA	

[Return to Menu](#)



[2001](#) [2005 89FB-18K876-AB](#) [ESRT32PS](#)

Code entry is only possible when the three lines are flashing. If the three lines are permanently lit, then the unit is Codelocked, and will require Decoding to reset.

Press Preset "1" repeatedly until the first digit is correct
 Press Preset "2" repeatedly until the second digit is correct
 Press Preset "3" repeatedly until the third digit is correct
 If you now have the correct Code shown on the Display press Preset "4" to enter.

A common fault of this unit is for the Display to go very dark - phone for details.

[Return to Menu](#)



[2006 RDS 91FB-18K876-AA](#)

Code entry is only possible when the display shows "CODE" and the four " - - - - " lines are flashing. If the four lines are permanently lit, then the unit is Codelocked, and will require Decoding to reset.

Press Preset "1" repeatedly until the first digit is correct
 Press Preset "2" repeatedly until the second digit is correct
 Press Preset "3" repeatedly until the third digit is correct
 Press Preset "4" repeatedly until the fourth digit is correct
 If you now have the correct Code shown on the Display press "SELECT" to enter.

DO NOT attempt to remove the tape, the unit has an electronic eject mechanism - Damage is Gauranteed!!
 A common fault of this unit is for one channel to go down on the cassette deck - phone for details.

[Return to Menu](#)



2040 93AB-19B160-AC

Code entry is only possible when the four " - - - " lines are flashing.
If the four " - - - " lines are permanently lit, then the unit is Codelocked and will require Decoding.

Press "AMS >>" repeatedly until the first digit is correct
Press "SCAN" repeatedly until the second digit is correct
Press "PLAY/STOP" repeatedly until the third digit is correct
Press "<< REW" repeatedly until the fourth digit is correct
If you now have the correct Code shown on the Display press "SHUFFLE" to enter.

[Return to Menu](#)



2006 RDS 92FB-18K876-AA 2006 RDS 93FB-18K876-GB 2008 93AB-18K876-BB

When this unit first powers up, a Registration number or message is shown. Press "SELECT".
Code entry is only possible when the display shows "CODE" and the four " - - - " lines are flashing.
If the four lines are permanently lit, then the unit is Codelocked, and will require Decoding to reset.

Press Preset "1" repeatedly until the first digit is correct
Press Preset "2" repeatedly until the second digit is correct
Press Preset "3" repeatedly until the third digit is correct
Press Preset "4" repeatedly until the fourth digit is correct
If you now have the correct Code shown on the Display press "SELECT" to enter.

DO NOT attempt to remove the tape, the unit has an electronic eject mechanism - Damage is Gauranteed!!
A common fault of this unit is for one channel to go down on the cassette deck - phone for details.

[Return to Menu](#)



3000 2 CH 96FP-18K876-EB 3000 2 CH 96FP-18K876-EC 3000 TRAF 96FP-18K876-FC
3000 TRAF XS6F-18K876-BA 4000 TRAF 97FP-18K876-GA 5000 RDS 96AP-18K876-AC
5000 RDS 96AP-18K876-CA 5000 RDS 96AP-18K876-CC 5000 RDS 97AP-18K876-LA

5000 RDS 98AP-18K876-BA
7000 RDS 95GB-18K876-BA

6000 CD 97AP-18C815-HA
7000 RDS 95GB-18K876-BC

6000 CD 98AP-18C815-CA
7000 RDS 97AP-18K876-EA

Code entry is only possible when the display shows "CODE" and the four " - - - - " lines are flashing. If the four lines are permanently lit, then the unit is Codelocked, and will require Decoding to reset.

Press Preset "1" repeatedly until the first digit is correct
Press Preset "2" repeatedly until the second digit is correct
Press Preset "3" repeatedly until the third digit is correct
Press Preset "4" repeatedly until the fourth digit is correct
If you now have the correct Code shown on the Display press preset "5" to enter.

[Return to Menu](#)

Fujitsu

Please phone for details

[Return to Menu](#)

Grundig

[AD182H](#)

[BETA 5](#)

[SC303D](#)

[SC303D\(C\)](#)

[Return to Menu](#)

[SC303D](#) [SC303D\(C\)](#)

Code entry is only possible with the ignition lights turned on. If the Display continuously shows "SAFE", then the unit may be Codelocked, and will require Decoding to reset.

Switch Ignition on and then turn radio on.
Display will show "SAFE" followed by "10 - - - -".
Press Preset "1" repeatedly until the first digit is correct
Press Preset "2" repeatedly until the second digit is correct
Press Preset "3" repeatedly until the third digit is correct
Press Preset "4" repeatedly until the fourth digit is correct
If you now have the correct Code shown on the Display, press and hold Preset "AS" for around 10 seconds, or until the unit "beeps".

A common fault of this unit is of ineligible Display and Digits missing - phone for details.
A common fault of this unit is for pre-sets to fail, making Code entry difficult - phone for details.

If the word "DISPLAY" is shown then an incorrect fascia has been fitted - phone for details.

[Return to Menu](#)

BETA 5

If the Display continuously shows "SAFE", then the unit may be Codelocked, and will require Decoding to reset.

Turn radio on.

Display will show "SAFE" followed by "1000".

The Code is entered by pressing the corresponding presets in order.

eg:- if your code number is 4332

Press Preset "4" once only

Press Preset "3" once only

Press Preset "3" once only

Press Preset "2" once only

If you now have the correct Code shown on the Display, press and hold Presets ">>" & "SCAN" simultaneously for around 10 seconds, or until the unit "beeps".

[Return to Menu](#)

AD182H

Code entry is only possible with the ignition lights turned on. If the Display continuously shows "SAFE", then the unit may be Codelocked, and will require Decoding to reset.

Switch Ignition on and then turn radio on.

Display will show "SAFE" followed by " - - - - ".

Press Preset "1" repeatedly until the first digit is correct

Press Preset "2" repeatedly until the second digit is correct

Press Preset "3" repeatedly until the third digit is correct

Press Preset "4" repeatedly until the fourth digit is correct

If you now have the correct Code shown on the Display, press and hold Preset "TP" for around 10 seconds, "SAFE" will then be shown and the unit will turn on.

[Return to Menu](#)

Hitachi

Please phone for details

[Return to Menu](#)

Honda

DC681/90

[Return to Menu](#)

JVC

Please phone for details

[Return to Menu](#)

Kenwood

KDC-8060R

KRC-758R

[Return to Menu](#)

KDC-8060R

Turn the radio on and the display shows " CODE - - - - "
Press Preset "1" repeatedly until your first digit appears.
Press Preset "2" repeatedly until your second digit appears.
Press Preset "3" repeatedly until your third digit appears.
Press Preset "4" repeatedly until your fourth digit appears.
If your code is now shown, press and hold the "Disp/Text" button for a few seconds.
When the word "APPROVED" is shown, your code has been accepted.

A common fault of this unit is for the Mask fascia to stop rotating - Phone for details

[Return to Menu](#)

KRC-758R

Turn the radio on and the display shows " CODE - - - - "
Press Preset "1" repeatedly until your first digit appears.

Press Preset "2" repeatedly until your second digit appears.
Press Preset "3" repeatedly until your third digit appears.
Press Preset "4" repeatedly until your fourth digit appears.
If your code is now shown, press and hold the "CLK" button for a few seconds.
When the word "APPROVED" is shown, your code has been accepted.

A common fault of this unit is for the Mask fascia to stop rotating - Phone for details

[Return to Menu](#)

Nissan

Please phone for details

[Return to Menu](#)

Opel

[SC303D](#)

[SC303D\(C\)](#)

[Return to Menu](#)

Panasonic

Please phone for details

[Return to Menu](#)

Peugeot

[PU-9534A](#)

[PU-9536A](#)

[PU-9679A](#)

[Return to Menu](#)

Philips

[DC570/60](#) [DC670](#) [DC670/60](#) [DC670/77](#) [DC681](#) [DC681/60](#) [DC681/79](#) [DC681/90](#)

If you have a rotating digit on the left, then the unit is codelocked, and will have to be decoded to reset.

Turn the radio on and the display shows " - C - "

Press Preset "1" and a "-" will appear.

Press the tuning "up" or "down" buttons to show your first digit.

Press preset "1" to enter, and the "-" will move along to the next entry."

Press the tuning "up" or "down" buttons to show your second digit.

Press preset "1" to enter, and the "-" will move along to the next entry."

Press the tuning "up" or "down" buttons to show your third digit.

Press preset "1" to enter, and the "-" will move along to the next entry."

Press the tuning "up" or "down" buttons to show your fourth digit.

Your code number should now be shown on the display.

If it is shown incorrect, power off the radio and start again.

If it is correct, press preset "1" to enter. This is accepted by a two tone beep.

A common fault of this unit is of a dark / ineligible Display and / or Digits missing - phone for details.

A common fault of this unit is for the tape deck to "Click" or tape stuck inside - phone for details.

A common fault of this unit is to turn on playing "MW" when turned off on "FM" - phone for details.

DC710/60B

Turn the radio on and the display shows "ROVER" followed by "CODE"

Press Preset "1" and "0 - -" will appear.

Press the tuning "<" or ">" buttons repeatedly to show your first digit.

Press preset "1" to enter.

Press the tuning "<" or ">" buttons repeatedly to show your second digit.

Press preset "1" to enter.

Press the tuning "<" or ">" buttons repeatedly to show your third digit.

Press preset "1" to enter.

Press the tuning "<" or ">" buttons repeatedly to show your fourth digit.

Your code number should now be shown on the display.

If it is shown incorrect, power off the radio and start again.

If it is correct, press preset "1" to enter. This is accepted by a two tone beep.

DC679

Turn the radio on and the display shows " CODE "
Press Preset "1" repeatedly until your first digit appears.
Press Preset "2" repeatedly until your second digit appears.
Press Preset "3" repeatedly until your third digit appears.
Press Preset "4" repeatedly until your fourth digit appears.
Your code number should now be shown on the display.
If it is correct, press preset "5" to enter. This is accepted by a two tone beep.

A common fault of this unit is for the tape deck to "Click" or tape stuck inside - phone for details.

[Return to Menu](#)

DC751 DC752

Code entry is only possible when the display flashes " CODE "
If the word " CODE " does not flash, then the unit is codelocked and will require decoding to reset.
The Code is entered by pressing the corresponding presets in order.
But take care as you may only have one attempt !

eg:- if your code number is 432
Press Preset "4" once only
Press Preset "3" once only
Press Preset "2" once only
The Radio should turn on automatically.

A common fault of this unit is for the tape deck to "Click" or tape stuck inside - phone for details.

[Return to Menu](#)

SC201D(C)

Code entry is only possible with the ignition lights turned on. If the Display continuously shows "SAFE", then the unit may be Codelocked, and will require Decoding to reset.

Switch Ignition on and then turn radio on.
Display will show "10 - - - "
Press Preset "1" repeatedly until the first digit is correct
Press Preset "2" repeatedly until the second digit is correct
Press Preset "3" repeatedly until the third digit is correct
Press Preset "4" repeatedly until the fourth digit is correct
If you now have the correct Code shown on the Display, press and hold Preset "AS" for around 10 seconds, or until the unit "beeps".

CCR800

Code entry is only possible with the ignition lights turned on. If the Display continuously shows "SAFE", then the unit may be Codelocked, and will require Decoding to reset.

Switch Ignition on, Press and hold Preset "AS" and then turn radio on, keeping "AS" pressed for around 10 seconds.

Display will show "10 - - - "

Press Preset "1" repeatedly until the first digit is correct

Press Preset "2" repeatedly until the second digit is correct

Press Preset "3" repeatedly until the third digit is correct

Press Preset "4" repeatedly until the fourth digit is correct

If you now have the correct Code shown on the Display, press and hold Preset "AS" for around 10 seconds, or until the unit "beeps".

[Return to Menu](#)

DC661/62

Switch on the unit, the display will show "Cod". Press "P1-7" and a "-" will be shown on the left.

Press ">1<" repeatedly until the first digit is correct and press "P1-7" to enter.

Press ">1<" repeatedly until the second digit is correct and press "P1-7" to enter.

Press ">1<" repeatedly until the third digit is correct and press "P1-7" to enter.

Press ">1<" repeatedly until the fourth digit is correct.

If you now have the correct Code shown on the Display, press "P1-7" to enter there will be a two tone beep, and the unit will turn on.

A common fault of this unit is for the tape deck to "Click" or tape stuck inside - phone for details.

[Return to Menu](#)

Pioneer

[Bavaria C Business RDS](#)[KE-92ZBM](#)[Return to Menu](#)

Switch Ignition on and then turn radio on.

Display will show "CODE - - - -"

Press Preset "1" repeatedly until the first digit is correct

Press Preset "2" repeatedly until the second digit is correct

Press Preset "3" repeatedly until the third digit is correct

Press Preset "4" repeatedly until the fourth digit is correct

If you now have the correct Code shown on the Display, press and hold tuning button ">" to enter.

[Return to Menu](#)

Porsche

Please phone for details

[Return to Menu](#)

Renault

[DC661/62](#)

[DC679](#)

[RENAULT H0 RDS](#)

[Return to Menu](#)

Rover

[DC570/60](#)

[DC670/60](#)

[DC681/60](#)

[DC710/60B](#)

[Return to Menu](#)

SAAB

[PU-9715A](#)

[SAAB 42 32 765](#)

[Return to Menu](#)

Seat

Please phone for details

[Return to Menu](#)

Sony

[2040 93AB-19B160-AC](#)

[Return to Menu](#)

Vauxhall

[CCR800](#)

[DC670](#)

[DC681/79](#)

[CAR300\(D\)](#)

[SC201D\(C\)](#)

[SC303D](#)

[SC303D\(C\)](#)

[Return to Menu](#)

Volkswagen

[BETA](#)

[BETA 5](#)

[Return to Menu](#)

Volvo

[DC670/77](#)

[Return to Menu](#)